3500/40M Proximitor Monitor Datasheet

Bently Nevada Machinery Condition Monitoring



(E) (E x)

Description

The 3500/40M Proximitor Monitor is a four-channel monitor that accepts input from Bently Nevada proximity transducers, conditions the signal to provide various vibration and position measurements, and compares the conditioned signals with user-programmable alarms. The user can program each channel of the 3500/40M with the 3500 Rack Configuration Software to perform any of the following functions:

- Radial
 Eccentricity
 REBAM
 vibration
- Thrust Differential position expansion

The primary purpose of the 3500/40M Proximitor Monitor is to provide the following:

- Machinery protection by continuously comparing monitored parameters against configured alarm setpoints to drive alarms
- Essential machine information for both operations and maintenance personnel

Each channel, depending on configuration, typically conditions its input signal to generate various parameters called **static values**. You can configure **alert setpoints** for each active static value and **danger setpoints** for any two of the active static values.

You program the monitor channels in pairs. The monitor channels can perform up to 2 of these functions at a time. Channels 1 and 2 can perform one function, while channels 3 and 4 perform another (or the same) function.



a Baker Hughes business

Specifications

Inputs

Signal	Accepts from 1 to 4 proximity transducer signals	
Power consumption	7.7 watts, typical	
Input Impedance		
Standard I/O	10 kΩ (Proximitor and acceleration inputs	
TMR I/O	The effective impedance of three bussed TMR I/O channels wired in parallel to one transducer is50 kΩ	

Sensitivity

Radial Vibration	3.94 mV/µm (100 mV/mil) or 7.87 mV/µm (200 mV/mil)
Thrust	3.94 mV/µm (100 mV/mil) or 7.87 mV/µm (200 mV/mil)
Eccentricity	3.94 mV/µm (100 mV/mil) or 7.87 mV/µm (200 mV/mil)
Differential Expansion	0.394 mV/μm (10 mV/mil) or 0.787 mV/μm (20 mV/mil)
REBAM	40 mV/µm (1000 mV/mil) or 80 mV/µm (2000 mV/mil)

Outputs

Front Panel	LEDs
OK LED	Indicates when the 3500/40M SIL Proximitor is operating properly.
TX/RX LED	Indicates when the 3500/40M SIL Proximitor is communicating with other modules in the 3500 rack.
Bypass LED	Indicates when the 3500/40M SIL Proximitor is in Bypass Mode.
Buffered Transducer Outputs	The front of each monitor has one coaxial connector for each channel. Each connector is short-circuit protected.
Output Impedance	550 Ω
Transducer Power Supply	-24 Vdc

Signal Conditioning



Specified at +25 °C (+77 °F) unless otherwise noted.

Radial Vibration

Frequency Response	
Direct filter	User-programmable Single-pole 4 Hz to 4000 Hz or 1 Hz to 600 Hz
Gap filter	-3 dB at 0.09 Hz
Not 1X filter	60 cpm to 15.8 times running speed Constant Q notch filter Minimum rejection in stopband of -34.9 dB
Smax	0.125 to 15.8 times running speed
1X and 2X vector filter	Constant Q Filter Minimum rejection in stopband of -57.7 dB

IX and 2X Vector, Not IX, and Smax parameters are valid for machine speeds of 60 cpm to 60,000 cpm.

Accuracy

Direct and Gap	Exclusive of filtering Within ±0.33% of full-scale typical ±1% maximum
1X and 2X	Within ±0.33% of full-scale typical ±1% maximum
Smax	Within ±5% maximum
Not 1X	±3% for machine speeds less than 30,000 cpm ±8.5% for machine speeds greater than 30,000 cpm



Thrust and Differential Expansion

Accuracy	Within ±0.33% of full-scale typical ±1% maximum	
Frequency Response		
Direct filter	-3 dB at 1.2 Hz	
Gap filter	-3 dB at 0.41 Hz	

Eccentricity

Accuracy	Within ±0.33% of full-scale typical ±1% maximum	
Frequency Response		
Direct filter	-3 dB at 15.6 Hz	
Gap filter	-3 dB at 0.41 Hz	

REBAM

Frequency Response	
Spike	User-programmable from 0.152 to 8678 Hz
Element	User-programmable for BPFO ranging from 0.139 to 3836 Hz
	High-pass corner is 0.8x BPFO. Low-pass corner is 2.2x BPFO.
Rotor	User programmable from 0.108 to 2221 Hz
Direct	Programmable from 3.906 to 14.2 Hz
	Selection is determined by Spike and Rotor filters.
Gap	Programmable from 0.002 to 1.0 Hz
	Selection is determined by the Rotor filter.
1X vector filter	The range of shaft speeds for which the value is valid depends on the nominal shaft speed for which the channel is configured.

Table 1: Relationship Between Nominal ShaftSpeed and the Valid Speed Range

Nominal Shaft Speed (Hz)	Valid Speed Range (Hz)
10 to <126	0.071 to 160
126 to <252	0.133 to 330
252 to <504	0.25 to 660
504 to 584	0.50 to 750

If a multi-event gear or speed wheel generates the speed input, the upper limitation of the resultant input signal is approximately 20 KHz.

Filter Quality	
Spike high-pass	6-pole Elliptic (155 dB per decade, minimum)
	Corner frequency is -0.1 dB.
Element bandpass	8-pole Butterworth (155 dB per decade minimum)
bunupuss	Corner frequency is -3 dB.
Rotor low-pass	6-pole Elliptic (155 dB per decade, minimum)
	Corner frequency is -0.1 dB.
Rotor, direct high-	1-pole Butterworth (18 dB per decade, minimum)
pass	Corner frequency is -3 dB.
Spike, direct low- pass	Corner is -0.3 dB maximum.
Gap low-pass	1-pole Butterworth (18 dB per decade, minimum)
	Corner frequency is -3 dB.
1X amplitude	Constant Q of 16.67
	Stopband frequencies are 0.91 and 1.09 times the running speed.
	Stopband attenuation is -51 dB minimum.



Accuracy	
	Within ±0.33% of full scale typical
Amplitude	±1% maximum when input signal is at the center frequency of the measured value's passband
Phase	3 degrees error, maximum
Channels enabled	Certain configurations allow the user to enable only one channel of a channel pair.

Filter Tracking / Stepping (Requires a valid speed signal)		
Initial condition	Nominal filter set used	
Switch from nominal to lower filter set	Current shaft speed ≤ 0.9 x (nominal shaft speed)	
Switch from lower to nominal filter set	Current shaft speed ≥ 0.95 x (nominal shaft speed)	
Switch from nominal to higher filter set	Current shaft speed ≥ 1.1 x (nominal shaft speed)	
Switch from higher to nominal filter set	Current shaft speed ≤ 1.05 x (Nominal Shaft Speed)	
Shaft speed error condition	Nominal filter set used	

Physical

Monitor Module (Main Board)		
Dimensions (Height x Width x Depth)	241.3 mm x 24.4 mm x 241.8 mm (9.50 in x 0.96 in x 9.52 in)	
Weight	0.91 kg (2.0 lb)	
I/O Modules (non-barrier)		
Dimensions (Height x Width x Depth)	241.3 mm x 24.4 mm x 99.1 mm (9.50 in x 0.96 in x 3.90 in)	
Weight	0.20 kg (0.44 lb)	
I/O Modules (barrier)		
Dimensions (Height x Width x Depth)	241.3 mm x 24.4 mm x 163.1 mm (9.50 in x 0.96 in x 6.42 in)	
Weight	0.46 kg (1.01 lb)	

Rack Space Requirements

Monitor	1 full-height front slot
I/O Modules	1 full-height rear slot

Barrier Parameters

The following parameters apply to CSA-NRTL/C and ATEX / IECEx approvals.

Proximitor Barrier	
Circuit Parameters	Vmax (PWR) = 26.25V (SIG) = 13.65 V
	Imax (PWR) = 110.48 mA (SIG) = 2.74mA
	Rmin (PWR) = 237.6 Ω (SIG) = 4985 Ω
Channel Parameters (entity)	Vmax = 27.45 V Imax = 113.24 mA Rmin (PWR) = 237.6 Ω (SIG) = 4985 Ω

Alarms

	Use Rack Configuration Software to set alert levels for each value measured by the monitor and Danger setpoints for any two of the values measured by the monitor.
Alarm Setpoints	Alarms are adjustable from 0 to 100% of full-scale for each measured value. However, when the full-scale range exceeds the range of the transducer, the range of the transducer will limit the setpoint.
Accuracy of alarm setpoints	Within 0.13% of the desired value

Alarm Time Delays

	You can pr Rack Conf	ogram alarm delays using iguration Software.	
Rad	Radial vibration, thrust, differential expansion and eccentricity		
Alert		From one to 60 seconds in one	



	second intervals	
Danger	0.1 seconds or from one to 60 seconds in 0.5 second intervals	
REBAM		
Alert	From the calculated minimum value to 400 seconds in one second intervals	
Danger	From the calculated minimum value to 400 seconds in 0.5 second intervals	

Static Values

Static values are measurements used to monitor the machine. The 3500/40M Proximitor Monitor returns the following static values:

Radial Vibration	Direct, Gap, 1X Amplitude, 1X Phase Lag, 2X Amplitude, 2X Phase Lag, Not 1X Amplitude and Smax Amplitude
Thrust Position	Direct, Gap
Differential Expansion	Direct, Gap
Eccentricity	Peak-to-peak, Gap, Direct Minimum, Direct Maximum
REBAM	Spike, Element, Rotor, Direct, Gap, 1X Amplitude, 1X Phase Lag

Compliance and Certifications

FCC

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference.
- This device must accept any interference received, including interference that may cause undesired operation.

EMC

European Community Directive:

EMC Directive 2014/30/EU

Standards:

EN 61000-6-2 Immunity for Industrial Environments

EN 61000-6-4 Emissions for Industrial Environments

Electrical Safety

European Community Directive:

LV Directive 2014/35/EU

Standards:

EN 61010-1

RoHS

European Community Directive:

RoHS Directive 2011/65/EU

Maritime

ABS - Marine and Offshore Applications

DNV GL Rules for Classification – Ships, Offshore Units, and High Speed and Light Craft



Hazardous Area Approvals



For the detailed listing of country and product specific approvals, refer to the *Approvals Quick Reference Guide* (108M1756) available from Bently.com.

CSA/NRTL/C

When used with I/O module ordering options without internal barriers	Class I, Zone 2: AEx/Ex nA nC ic IIC T4 Gc; Class I, Zone 2: AEx/Ex ec nC ic IIC T4 Gc; Class I, Division 2, Groups A, B, C, and D; T4 @ Ta= -20° C to $+65^{\circ}$ C (-4° F to $+149^{\circ}$ F) When installed per drawing 149243 or 149244.
When used with I/O module ordering options with internal barriers	Class I, Zone 2: AEx/Ex nA nC ic [ia Ga] IIC T4 Gc; Class I, Zone 2: AEx/Ex ec nC ic [ia Ga] IIC T4 Gc; Class I, Division 2, Groups A, B, C, and D (W/ IS Output for Division 1) T4 @ Ta= -20° C to $+65^{\circ}$ C (-4° F to $+149^{\circ}$ F) When installed per drawing 138547.

ATEX/IECEx

When used with I/O module ordering options without internal barriers	$\underbrace{\textbf{Ex}}_{II 3 G}$ Ex nA nC ic IIC T4 Gc; Ex ec nC ic IIC T4 Gc; T4 @ Ta= -20°C to +65°C (-4°F to +149°F) When installed per drawing 149243 or 149244.
When used with I/O module ordering options with internal barriers	$\underbrace{\textbf{Ex}}_{II 3(1) G}$ Ex nA nC ic [ia Ga] IIC T4 Gc; Ex ec nC ic [ia Ga] IIC T4 Gc; T4 @ Ta= -20°C to +65°C (-4°F to +149°F) When installed per drawing 138547.



Ordering Considerations

General

The 3500/40M Module requires the following (or later) firmware, and software revisions:

3500/01 Software – Version 2.50 3500/02 Software – Version 2.20 3500/03 Software – Version 1.21

When ordering I/O Modules with External Terminations the External Termination Blocks and Cable must be ordered separately for each I/O Module.

External Termination Blocks cannot be used with Internal Termination I/O Modules.

Bussed External Termination Blocks are to be used with TMR I/O Modules only.

Internal Barrier I/O Modules

Consult the 3500 Internal Barrier specification sheet (Document 141495) if the Internal Barrier Option is selected.

REBAM

The REBAM channel type requires the following (or later) firmware, and software revisions:

3500/40M Module Firmware – Revision 2.1 3500/01 Software – Version 3.30 3500/02 Software – Version 2.40 3500/03 Software – Version 1.40 DM2000 Software – Version 3.40.

Requires the M version of the 3500 Proximitor Monitor.



Ordering Information



For the detailed listing of country and product specific approvals, refer to the *Approvals Quick Reference Guide* (108M1756) available from Bently.com.

Proximitor Monitor 3500/40M - AA-BB

A: I/O Module Type

-	<i>.</i>
01	Proximitor I/O Module with Internal Termination
02	Proximitor I/O Module with External Terminations
03	Proximitor I/O Module with Internal Barriers and Internal Terminations
B: Ho	zardous Area Approval Option
00	None
01	CSA / NRTL / C (Class 1, Division 2)
02	ATEX / IECEx / CSA (Class 1, Zone 2)

Agency Approval Option B-02 is only available with Ordering Option A-03

External Termination Blocks

125808-01	Proximitor ET Block Euro Style Connectors
128015-01	Proximitor ET Block Terminal Strip Connectors
132242-01	Proximitor/ Seismic TMR ET Block Euro Style Connectors
132234-01	Proximitor/Seismic TMR ET Block Terminal Strip Connectors

Cables

3500 Transducer XDCR signal to External Termination (ET) Block Cable 129525 - AAAA-BB

A: I/O Cable Length		
0005	5 feet 1.5 metres)	
0007	7 feet(2.1 metres)	
0010	10 feet(3.0 metres)	
0025	25 feet(7.6metres)	
0050	50 feet(15.2 metres)	
0100	100 feet(30.5 metres	
B: Assembly Instructions		
01	Not assembled	
02	Assembled	

Spares

3500/40M Proximitor Monitor
Proximitor I/O Module with Internal Terminations
Proximiotr I/O Module with Extrnal Terminations
Proximitor I/O Module with Internal Barriers and Internal Terminations
TMR Proximitor I/O Module with External Terminations
3500/40M Monitor User Guide
Internal I/O Module connector header, Euro style, 8-pin
Internal I/O Module connector header, Euro style, 12-pin



Graphs and Figures

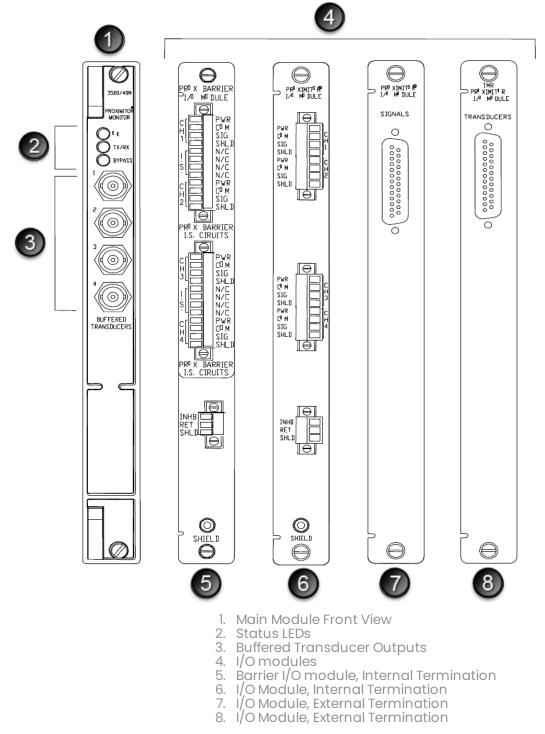


Figure 1: Assorted 3500/40M Proximitor Monitor Views



Bently Nevada

a Baker Hughes business

Copyright 2020 Baker Hughes Company. All rights reserved.



Bently Nevada, Orbit Logo and Proximitor are registered trademarks of Bently Nevada, a Baker Hughes Business, in the United States and other countries. The Baker Hughes logo is a trademark of Baker Hughes Company. All other product and company names are trademarks of their respective holders. Use of the trademarks does not imply any affiliation with or endorsement by the respective holders.

Baker Hughes provides this information on an "as is" basis for general information purposes. Baker Hughes does not make any representation as to the accuracy or completeness of the information and makes no warranties of any kind, specific, implied or oral, to the fullest extent permissible by law, including those of merchantability and fitness for a particular purpose or use. Baker Hughes hereby disclaims any and all liability for any direct, indirect, consequential or special damages, claims for lost profits, or third party claims arising from the use of the information, whether a claim is asserted in contract, tort, or otherwise. Baker Hughes reserves the right to make changes in specifications and features shown herein, or discontinue the product described at any time without notice or obligation. Contact your Baker Hughes representative for the most current information.

The information contained in this document is the property of Baker Hughes and its affiliates; and is subject to change without prior notice. It is being supplied as a service to our customers and may not be altered or its content repackaged without the express written consent of Baker Hughes. This product or associated products may be covered by one or more patents. See Bently.com/legal.

1631 Bently Parkway South, Minden, Nevada USA 89423 Phone: 1.775.782.3611 or 1.800.227.5514 (US only) Bently.com

10/10