# 3500/42M Proximitor Seismic Monitor Datasheet

Bently Nevada Machinery Condition Monitoring

143694 Rev. V



**( E )** (E x)

## **Description**

The 3500/42M Proximitor Seismic Monitor:

- Protects machinery by continuously comparing monitored parameters against configured alarm setpoints to drive alarms.
- Communicates essential machine information to both operations and maintenance personnel.

The 3500/42M Proximitor Seismic Monitor is a four-channel monitor that accepts input from proximity and seismic transducers. It conditions the signal to provide vibration and position measurements and compares the conditioned signals with user-programmable alarms.

You can program each channel using the 3500 Rack Configuration Software to monitor and report:

- Radial vibration
- REBAM
- Thrust position
- Differential
- Shaft absolute

Circular acceptance region

**Bently Nevada** 

a Baker Hughes business

Acceleration

- expansion Eccentricity
- Velocity

The monitor channels are programmed in pairs and can perform up to two of the listed functions at a time. For example, Channels 1 and 2 can perform one function while channels 3 and 4 perform another or the same function.

Each channel, depending on configuration, typically conditions its input signal to generate various parameters called static values. You can configure alert setpoints for each active static value and danger setpoints for any two of the active static values.

## Specifications

## Inputs

Signal	Accepts from 1 to 4 proximity, velocity or acceleration transducer signals	
Power consumption	7.7 watts, typical	
Input Impedance		
Standard I/O	10 kΩ (Proximitor and acceleration inputs)	

## Sensitivity

Radial Vibration	3.94 mV/µm (100 mV/mil) or 7.87 mV/µm (200 mV/mil)	
Thrust	3.94 mV/μm (100 mV/mil) or 7.87 mV/μm (200 mV/mil)	
Eccentricity	3.94 mV/μm (100 mV/mil) or 7.87 mV/μm (200 mV/mil)	
Differential Expansion	0.394 mV/μm (10 mV/mil) or 0.787 mV/μm (20 mV/mil)	
REBAM	40 mV/μm (1000 mV/mil) or 80 mV/μm (2000 mV/mil)	
Acceleration & Acceleration2	10 mV/ (m/s2) (100 mV/g)	
Velocity & Velocity2	20 mV/ (mm/s) pk (500 mV/ (in/s) pk) or 5.8 mV/ (mm/s) pk (145 mV/ (in/s) pk) or 4 mV/ (mm/s) pk (100 mV/ (in/s) pk)	
Shaft Absolute, Radial Vibration	3.94 mV/μm (100 mV/mil) or 7.87 mV/μm (200 mV/mil)	
Shaft absolute, Direct	3.94 mV/μm (100 mV/mil) or 7.87 mV/μm (200 mV/mil)	
Shaft absolute, Velocity	20 mV/ (mm/s) pk (500 mV/ (in/s) pk) or 5.8 mV/ (mm/s) pk (145 mV/ (in/s) pk) or 4 mV/ (mm/s) pk (100 mV/ (in/s) pk)	
Circular Acceptance Region	See Radial Vibration on the next page.	

## Outputs

Front Panel LEDs			
ok led	Indicates when the 3500/42M Proximitor Seismic Monitor is operating properly.		
TX/RX LED	Indicates when the 3500/42M Proximitor Seismic Monitor is communicating with other modules in the 3500 rack.		
Bypass LED	Indicates when the 3500/42M Proximitor Seismic Monitor is in Bypass Mode.		
Buffered Transducer	The front of each monitor has one coaxial connector for each channel.		
Outputs	Each connector is short-circuit protected.		
Output Impedance	550 Ω		
Transducer Power Supply	-24 Vdc		
Recorder	+4 to +20 mA Values are proportional to monitor full-scale.		
	The monitor provides individual recorder values for each channel.		
	Monitor operation is unaffected by short circuits on recorder outputs.		
Voltage	0 to +12 Vdc range across load		
Compliance (current output)	Load resistance is 0 to 600 Ω.		
Resolution	0.3662 µA per bit ±0.25% error at room temperature ±0.7% error over temperature range		
	Update rate approximately 100 ms or less		
Shaft Absolute Buffered Outputs	The Shaft Absolute I/O modules have one output for each channel group.		
	Each output is short-circuit protected.		
Shaft Absolute Output Impedance	300 Ω		
Output supply parameters	See Output Supply Parameters on page 9		



## Signal Conditioning

Specified at +25 °C (+77 °F) unless otherwise noted.

## **Radial Vibration**

ø)

Frequency Response		
Direct filter	User-programmable Single-pole -3db at 4 Hz to 4000 Hz or 1 Hz to 600 Hz ±1% accuracy	
Gap filter	-3 dB at 0.09 Hz	
Not 1X filter	60 cpm to 15.8 times running speed Constant Q notch filter Minimum rejection in stopband of -34.9 dB	
Smax	0.125 to 15.8 times running speed	
1X and 2X vector filter	Constant Q Filter Minimum rejection in stopband of -57.7 dB	

1X and 2X Vector, Not 1X, and Smax parameters are valid for machine speeds of 60 cpm to 60,000 cpm.

Accuracy	
Direct and Gap	Exclusive of filtering Within ±0.33% of full-scale typical ±1% maximum
1X and 2X	Within ±0.33% of full-scale typical ±1% maximum
Smax	Within ±5% maximum
Not 1X	±3% for machine speeds less than 30,000 cpm ±8.5% for machine speeds greater than 30,000 cpm

## **Thrust and Differential Expansion**

Accuracy	Within ±0.33% of full-scale typical ±1% maximum	
Frequency Response		
Direct filter	-3 dB at 1.2 Hz	
Gap filter	-3 dB at 0.41 Hz	

## **Eccentricity**

Accuracy	Within ±0.33% of full-scale typical ±1% maximum	
Frequency Response		
Direct filter	-3 dB at 15.6 Hz	
Gap filter	-3 dB at 0.41 Hz	

#### Acceleration

Accuracy	Within ±0.33% of full-scale typical ±1% maximum Exclusive of filters
Filter Quality	
High-pass	4-pole (80 dB per decade, 24 dB per octave)
Low-pass	4-pole (80 dB per decade, 24 dB per octave)

# Table 1: Frequency Ranges if Both Channelsof a Channel Pair are Enabled

Dual Channel Frequency Response			
Output Type	Without Filter	Low or High Pass Filter	With Integration
RMS	10 to 30,000 Hz	10 to 9,155 Hz	10 to 9,155 Hz
Peak	3 to 30,000 Hz	3 to 9,155 Hz	10 to 9,155 Hz

## Table 2: Frequency Ranges if a SingleChannel of a Channel Pair is Enabled

Single Channel Frequency Response			
Output Type	Without Filter Low or High Pass Filter	With Integration	
RMS	10 to 30,000 Hz	10 to 14,500 Hz	
Peak	3 to 30,000 Hz	10 to 14,500 Hz	



## **Acceleration II**

Accuracy	Within ± 0.33% of full scale typical ± 1% maximum Exclusive of filters		
Filter Quality			
High-pass	4-pole (80 dB per decade, 24 dB per octave)		
Low-pass	4-pole (80 dB per decade, 24 dB per octave)		
Frequency Response			
Bias filter	-3 dB at 0.01 Hz		
Not OK filter	-3 dB at 2400 Hz		
1X and 2X vector filter	Valid for machine speeds of 60 cpm to 100,000 cpm		

## Table 3: Frequency Ranges for the 3500/42MProximitor Seismic Monitor under Different **Options using the Acceleration II Channel** Туре

Frequency Ranges			
Output Type	Without Filter Low or High Pass Filter	With Integration	
RMS	10 to 30,000 Hz	10 to 20,000 Hz	
Peak	3 to 30,000 Hz	10 to 20,000 Hz	

## Velocity and Velocity II

Accuracy	Within ±0.33% of full-scale typical ±1% maximum +1% -3% with MTL 764(-) Zener External Barrier Exclusive of filters
Velomitor sensor accuracy	Full Scale 0-0.5: ±3% typical Full Scale 0-1.0: ±2% typical Full Scale 0-2.0: ±1% typical
Velomitor sensor accuracy with barriers	Under radiated immunity conditions, add ± 11% for all full scale ranges. The total Velomitor sensor accuracy will be ± 15%.
Frequency Response	
Bias	-3dB at 0.01 Hz Velocity II only

Not OK filter	-3 dB at 40 Hz Velocity II only
RMS	10 to 5,500 Hz, -3 dB
Peak or peak-to- peak	3 to 5,500 Hz, -3 dB
1X and 2X vector filter	Valid for machine speeds of 60 to 100,000 cpm Velocity II only
Filter Quality	
High-pass	4-pole (80 dB per decade, 24 dB per

5 1	octave)
Low-pass	2-pole (40 dB per decade, 12 dB per octave)

## Shaft Absolute, Radial Vibration

Frequency Response		
Direct filter	User-programmable 4 Hz to 4000 Hz or 1 Hz to 600 Hz	
Gap filter	-3 dB at 0.09 Hz	
1X vector filter	Valid for machine speeds of 240 cpm to 60,000 cpm	
Accuracy		
Direct and gap	Within ±0.33% of full-scale typical ±1% maximum	
1X	Within ±0.33% of full-scale typical ±1% maximum	

## Shaft Absolute, Velocity

Accuracy	Within ±0.33% of full scale typical ±1% maximum Exclusive of filters	
Frequency Respo	nse	
Peak or peak-to-peak	User-programmable 3 to 4,000 Hz, -3 dB	
Filter Quality		
High-pass	2-pole (40 dB per decade, 12 dB per octave)	
Low-pass	2-pole (40 dB per decade, 12 dB per octave)	
1X vector filter	Constant Q Filter Minimum rejection in stopband	



of -57.7 dB

## Shaft Absolute Buffered Output

Accuracy	±6.0% @ 25 C
Circular acceptance region	See Radial Vibration on page 3

#### REBAM

Frequency Response	
Spike	User-programmable from 0.152 to 8678 Hz
Element	User-programmable for BPFO ranging from 0.139 to 3836 Hz
	High-pass corner is 0.8x BPFO. Low-pass corner is 2.2x BPFO.
Rotor	User programmable from 0.108 to 2221 Hz
Direct	Programmable from 3.906 to 14.2 Hz
	Selection is determined by Spike and Rotor filters.
Gap	Programmable from 0.002 to 1.0 Hz
	Selection is determined by the Rotor filter.
1X vector filter	The range of shaft speeds for which the value is valid depends on the nominal shaft speed for which the channel is configured.

# Table 4: Summary of the Relationshipbetween Nominal Shaft Speed and the ValidSpeed Range

Nominal Shaft Speed (Hz)	Valid Speed Range (Hz)
10 to <126	0.071 to 160
126 to <252	0.133 to 330
252 to <504	0.25 to 660
504 to 584	0.50 to 750

If a multi-event gear or speed wheel generates the speed input, the upper



limitation of the resultant input signal is approximately 20 KHz.

Filter Quality	
Spike high-pass	6-pole Elliptic (155 dB per decade, minimum)
	Corner frequency is -0.1 dB.
Element	8-pole Butterworth (155 dB per decade minimum)
bandpass	Corner frequency is -3 dB.
Rotor low-pass	6-pole Elliptic (155 dB per decade, minimum)
	Corner frequency is -0.1 dB.
Rotor, direct high-	1-pole Butterworth (18 dB per decade, minimum)
pass	Corner frequency is -3 dB.
Spike, direct low- pass	Corner is -0.3 dB maximum.
Gap low-pass	1-pole Butterworth (18 dB per decade, minimum)
	Corner frequency is -3 dB.
	Constant Q of 16.67
1X amplitude	Stopband frequencies are 0.91 and 1.09 times the running speed.
	Stopband attenuation is -51 dB minimum.

Accuracy	
	Within ±0.33% of full scale typical
Amplitude	±1% maximum when input signal is at the center frequency of the measured value's passband
Phase	3 degrees error, maximum
Channels enabled	You can use certain configurations to enable only one channel of a channel pair. <u>See REBAM Channels on page 17.</u> .



Filter Tracking / Stepping (Requires a valid speed signal)	
Initial condition	Nominal filter set used
Switch from nominal to lower filter set	Current shaft speed ≤ 0.9 x (nominal shaft speed)
Switch from lower to nominal filter set	Current shaft speed ≥ 0.95 x (nominal shaft speed)
Switch from nominal to higher filter set	Current shaft speed ≥ 1.1 x (nominal shaft speed)
Switch from higher to nominal filter set	Current shaft speed ≤ 1.05 x (Nominal Shaft Speed)
Shaft speed error condition	Nominal filter set used

## Physical

Monitor Module (Main Board)		
Dimensions (Height x Width x Depth)	241.3 mm x 24.4 mm x 241.8 mm (9.50 in x 0.96 in x 9.52 in)	
Weight	0.91 kg (2.0 lb)	
I/O Modules (no	n-barrier)	
Dimensions (Height x Width x Depth)	241.3 mm x 24.4 mm x 99.1 mm (9.50 in x 0.96 in x 3.90 in)	
Weight	0.20 kg (0.44 lb)	
I/O Modules (barrier)		
Dimensions (Height x Width x Depth)	241.3 mm x 24.4 mm x 163.1 mm (9.50 in x 0.96 in x 6.42 in)	
Weight	0.46 kg (1.01 lb)	

## **Rack Space Requirements**

Monitor	1 full-height front slot
I/O Modules	1 full-height rear slot

## **Barrier Parameters**

The following parameters apply to CSA-NRTL/C and ATEX approvals.

Proximitor Barrier	
Circuit Parameters	Vmax (PWR) = 26.80 V (SIG) = 14.05 V Imax (PWR) = 112.8 mA (SIG) = 2.82 mA Rmin

	(PWR) = 237.6 Ω (SIG) = 4985 Ω	
Channel Parameters (entity)	Vmax = 28.0 V Imax = 115.62 mA Rmin (PWR) = 237.6 Ω (SIG) = 4985 Ω	
Seismic Barrier		
Circuit Parameters	Vmax (PWR) = 27.25 V Imax (PWR) = 91.8 mA Rmin (PWR) = 297 Ω	
Channel Parameters (entity)	Vmax = 27.25 V Imax = 91.8 mA Rmin (PWR) = 297 Ω	

## Alarms

Use Rack Configuration Software to set alert levels for each value measured by the monitor and danger setpoints for any two of the values measured by the monitor.
Alarms are adjustable from 0 to 100% of full-scale for each measured value. However, when the full-scale range exceeds the range of the transducer, the range of the transducer will limit the setpoint.
Within 0.13% of the desired value



143694 Rev. V

Alarm Time Delays

You can program alarm delays using Rack Configuration Software.		
For all channel pair types excluding Shaft Absolute Velocity and REBAM		
Alert	From one to 60 seconds in one second intervals	
Danger	0.1 seconds or from one to 60 seconds in 0.5 second intervals	
Shaft Absolute Velocity		
Alert	From one to 60 seconds in one second intervals	
Danger	0.1 seconds or from one to 60 seconds in 0.5 second intervals	
REBAM		
Alert	From the calculated minimum value to 400 seconds in one second intervals	
Danger	From the calculated minimum value to 400 seconds in 0.5 second intervals	

## **Static Values**

Static values are measurements used to monitor the machine. The 3500/42M Proximitor Seismic Monitor returns the following static values:

Radial Vibration	Direct, Gap, 1X Amplitude, 1X Phase Lag, 2X Amplitude, 2X Phase Lag, Not 1X Amplitude and Smax Amplitude
Thrust Position Direct, Gap	
Differential Expansion	Direct, Gap
Eccentricity Peak-to-peak, Gap, Direct Minimum, Direct Maxir	
REBAM	Spike, Element, Rotor, Direct, Gap, 1X Amplitude, 1X Phase Lag
Acceleration	Direct Defined as one of the following: RMS Acceleration, Peak Acceleration, RMS Velocity, Peak Velocity, Band-pass peak Acceleration, or Band-pass peak Velocity
Acceleration II	Direct, 1X Amplitude and 2X

	Amplitude
	Defined as one of the following: RMS Acceleration, Peak Acceleration, RMS Velocity, Peak Velocity, Band-pass peak Acceleration, or Band-pass peak Velocity
	Additionally, 1X Phase, 2X Phase and Bias Voltage
	Direct
Velocity	Defined as one of the following: RMS Velocity, Peak Velocity, peak-to-peak Displacement, Band-pass peak Velocity, Band- pass, or Peak-to-peak Displacement
	Direct, 1X Amplitud and 2X Amplitude
Velocity II	Defined as one of the following: RMS Velocity, Peak Velocity, peak-to-peak Displacement, Band-pass peak Velocity, Band- pass, or Peak-to-peak Displacement
	Additionally, 1X Phase, 2X Phase and Bias Voltage
Shaft Absolute, Radial Vibration and Shaft Absolute, Velocity	Direct, Gap, 1X Amplitude, 1X Phase Lag
Circular Acceptance Region	Direct, Gap, 1X Amplitude, 1X Phase Lag, 1X Circular Acceptance Radius, 2X Amplitude, 2X Phase Lag, 2X Circular Acceptance Radius



## Compliance and Certifications

#### FCC

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference.
- This device must accept any interference received, including interference that may cause undesired operation.

#### **EMC**

European Community Directive:

EMC Directive 2014/30/EU

Standards:

EN 61000-6-2 Immunity for Industrial Environments

EN 61000-6-4 Emissions for Industrial Environments

#### **Electrical Safety**

European Community Directive:

LV Directive 2014/35/EU

Standards:

EN 61010-1

#### **RoHS**

European Community Directive:

RoHS Directive 2011/65/EU

#### Maritime

ABS - Marine and Offshore Applications

DNV GL Rules for Classification – Ships, Offshore Units, and High Speed and Light Craft

## **Hazardous Area Approvals**



For the detailed listing of country and product specific approvals, refer to the *Approvals Quick Reference Guide* (108M1756) available from Bently.com.

## CSA/NRTL/C

When used with I/O module ordering options without internal barriers	Class I, Zone 2: AEx/Ex nA nC ic IIC T4 Gc; Class I, Zone 2: AEx/Ex ec nC ic IIC T4 Gc; Class I, Division 2, Groups A, B, C, and D; T4 @ Ta= -20°C to +65°C (-4°F to +149°F) When installed per drawing 149243 or 149244.	
When used with I/O module ordering options with internal barriers	Class I, Zone 2: AEX/EX nA nC ic [ia Ga] IIC T4 Gc; Class I, Zone 2: AEX/EX ec nC ic [ia Ga] IIC T4 Gc; Class I, Division 2, Groups A, B, C, and D (W/ IS Output for Division 1) T4 @ Ta= $-20^{\circ}$ C to $+65^{\circ}$ C ( $-4^{\circ}$ F to $+149^{\circ}$ F) When installed per drawing 138547.	

## ATEX/IECEx

When used with I/O module ordering options without internal barriers	$\underbrace{\textbf{Ex}}_{II 3 G}$ Ex nA nC ic IIC T4 Gc; Ex ec nC ic IIC T4 Gc; T4 @ Ta= -20°C to +65°C (-4°F to +149°F) When installed per drawing 149243 or 149244.
When used with I/O module ordering options with internal barriers	$\underbrace{\textbf{Ex}}_{II 3(1) G}$ Ex nA nC ic [ia Ga] IIC T4 Gc; Ex ec nC ic [ia Ga] IIC T4 Gc; T4 @ Ta= -20°C to +65°C (-4°F to +149°F) When installed per drawing 138547.



## **Output Supply Parameters**

I/O Part and Order	Description		Supply Parameters		
Options	Description	Configuration	U (V)	I (mA)	P (W)
128229-01 A 01	Prox/Seismic I/O Module with Internal Terminations	Prox/Accel	23.9	45.5	1.09
		Velomitor	23.9	45.5	1.09
		Seismoprobe	6.82	2.75	0.02
	Prox/Seismic I/O Module with External Terminations	Prox/Accel	23.9	45.5	1.09
128240-01 A 02		Velomitor	23.9	45.5	1.09
		Seismoprobe	6.82	2.75	0.02
	Shaft Absolute I/O Module with Internal Terminations	Prox & Velomitor	23.9	45.5	1.09
		Prox & Seismoprobe	6.82	45.5	0.31
	Shaft Absolute I/O Modules with External Terminations	Prox & Velomitor	23.9	45.5	1.09
		Prox & Seismoprobe	6.82	45.5	0.31
140471-01 A 09	Prox/Velom I/O Module with Internal Terminations	Prox/Accel	23.9	45.5	1.09
		Velomitor	23.9	45.5	1.09
140482-01 A 10	Prox/Velom I/O Module with External Terminations	Prox/Accel	23.9	45.5	1.09
		Velomitor	23.9	45.5	1.09

The following values are accurate regardless of external barrier connections.



## **Ordering Information**

For the detailed listing of country and product specific approvals, refer to the *Approvals Quick Reference Guide* (108M1756) available from Bently.com.

#### Monitor 3500/42M - AA - BB

#### A: I/O Module Type

See I/O Module Types	s on page 12.
----------------------	---------------

#### **B: Hazardous Area Approval Option**

00	None
01	CSA / NRTL / C (Class 1, Division 2)
02	ATEX / IECEx / CSA (Class 1, Zone 2) Option B02 is available only with A04, A05, A06 and A09.

#### **External Termination Blocks**

125808-02	Proximitor ET Block Euro Style Connectors	
128015-02	Proximitor ET Block Terminal Strip Connectors	
128702-01	Recorder External Termination Block Euro Style connectors	
128710-01	Recorder External Termination Block Terminal Strip connectors	
140993-01	Shaft Absolute External Termination Block Euro Style connectors	
141001-01	Shaft Absolute External Termination Block Terminal Strip	
125808-08	Proximitor / Velomitor External Termination Block Euro Style connectors	

#### Cables

#### 3500 Transducer XDCR signal to External Termination Block Cable 129525 - AAAA - BB

A: I/O Cable Length		
0005	5 feet (1.5 metres)	
0007	7 feet (2.1 metres)	
0010	10 feet (3.0 metres)	
0025	25 feet (7.6 metres)	
0050	50 feet (15.2 metres)	
0100	100 feet (30.5 metres)	
B: Assembly Instructions		
01	Not Assembled	
02	Assembled	

#### External Termination Block Cable 129529 - AAAA- BB

A: I/O Cable Length			
0005	5 feet (1.5 metres)		
0007	7 feet (2.1 metres)		
0010	10 feet (3.0 metres)		
0025	25 feet (7.6 metres)		
0050	50 feet (15.2 metres)		
0100	100 feet (30.5 metres)		
B: Assembly Instructions			
01	Not Assembled		
02	Assembled		



#### **Spares**

176449-02	3500/42M Proximitor Seismic Monitor	
128229-01	Prox/Seismic I/O Module with internal terminations	
128240-01	Prox/Seismic I/O Module with external terminations	
00530843	3500/42M Prox/Seismic I/O Module four-pin connector shunt	
143489	3500/42M Monitor User Guide	
135489-01	I/O Module with Internal Barriers (internal terminations, 4 x Prox/Accel)	
135489-02	I/O Module with Internal Barriers (internal terminations, 2 x Prox/Accel and 2 x Velomitor)	
135489-03	I/O Module with Internal Barriers (internal terminations, 4 x Velomitor)	
138708-01	Shaft Absolute I/O Module with internal terminations	
138700-01	Shaft Absolute I/O Modules with external terminations	
00517018	3500/42M Shaft Absolute I/O Module 8-pin connector shunt	
140471-01	Prox/Velom I/O Module with internal terminations	
140482-01	Prox/Velom I/O Module with External Terminations	
00561941	3500/42M Prox/Velom I/O Module 10-pin connector shunt	
00580434	Internal I/O Module connector header, Euro style, 8-pin	
	Used on I/O modules 128229-01 and 138708-01	
00580432	Internal I/O Module connector header, Euro style, 10-pin	
	Used on I/O modules 128229-01 and 138708-01	

```
00502133
```

Internal I/O Module connector header, Euro style, 12-pin

For spare front and rear cover plates, please see 3500/05 System Rack datasheet (document 141525) ð

## Firmware & Software Requirements

	3500/01 software, version 2.50 or later	
3500/42M Proximitor Seismic Monitor	3500/02 software, version 2.20 or later	
	3500/03 software, versior 1.21 or later	
Internal Barrier I/O Modules	See the 3500 Internal Barrier datasheet (part number 141495-01)	
	3500/42M Module Firmware, revision B	
Shaft Absolute	3500/01 Software, version 2.61 DM2000 Software, version 3.10	
	The 3500 Proximitor / Seismic Monitor, version M	
	3500/40M Module Firmware – Revision 2.1	
REBAM	3500/01 Software, version 3.30 3500/02 Software, version 2.40 3500/03 Software, version 1.40 DM2000 Software, version 3.40	
	The 3500 Proximitor Monitor, version M	
	3500/42M Module Firmware, revision 2.10	
Acceleration II, Velocity II, Circular Acceptance Region	3500/01 Software, version 3.20 DM2000 Software, version 3.30	
	The 3500 Proximitor Monitor, version M	



143694 Rev. V

## I/O Module Types


Ø

AA Ordering Option	I/O Part Number	I/O Description	Transducer Type
01	128229-01	Prox/Seismic I/O Module with internal terminations	Seismoprobe Prox/Accel and Velomitor are supported but are not recommended.
02	128240-01	Prox/Seismic I/O Module with external terminations	Seismoprobe Prox/Accel and Velomitor are supported but are not recommended.
04	135489-01	I/O Module with internal Barriers, internal terminations, 4 x Prox/Accel	Prox/Accel on channels 1 through 4
05	135489-02	I/O Module with internal barriers, internal terminations, 2 x Prox/Accel and 2 x Velomitor	Prox/Accel on channels 1 and 2 Velomitor on channels 3 and 4
06	135489-03	I/O Module with internal barriers, internal terminations, 4 x Velomitor	Velomitor on channels 1 through 4
07	138708-01	Shaft Absolute I/O Module with internal terminations	Prox/Accel or Velomitor or Seismorprobe
08	138700-01	Shaft Absolute I/O Modules with external terminations	Prox/Accel or Velomitor or Seismorprobe
09	140471-01	Prox/Velom I/O Module with internal terminations	Prox/Accel, Velomitor or HTVS
10	140482-01	Prox/Velom I/O Module with external terminations	Prox/Accel, Velomitor or HTVS

External termination blocks cannot be used with Internal Termination I/O Modules. When ordering I/O modules with external terminations, order the external termination blocks and cable separately for each I/O module.




## **Graphs and Figures**

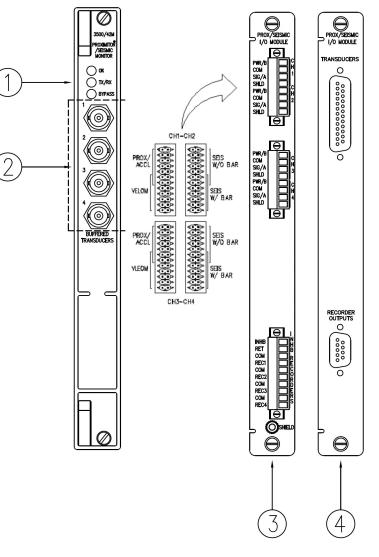

- 1. Status LEDs
- 2. Buffered Transducer Outputs
- Prox/Seismic I/O Module with Internal Terminations
  Prox/Seismic I/O Module with External Terminations

#### Figure 1: Front and Rear Views of 3500/42M Monitor



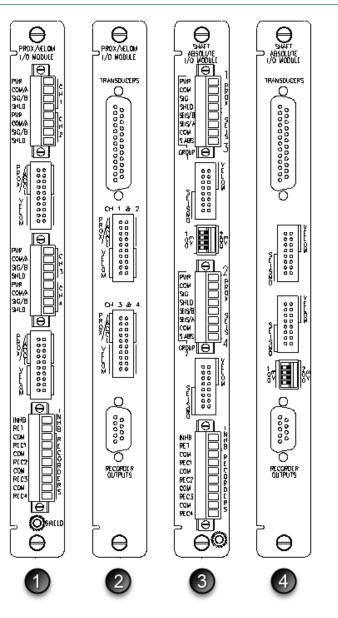


- 1. Prox/Velom I/O Module, Internal Terminations
- 2. Prox/Velom I/O Module, External Terminations
- 3. Shaft Absolute I/O Module, Internal Terminations
- 4. Shaft Absolute I/O Module, External Terminations

#### Figure 2: Additional I/O Modules for Legacy 3500/42M




143694 Rev. V

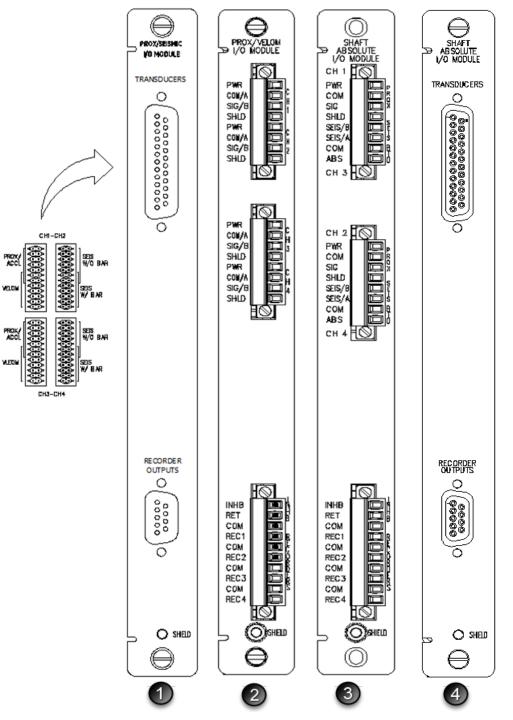

Prox/Velom I/O modules and Shaft Absolute I/O modules with internal or external terminations have the same jumpers.





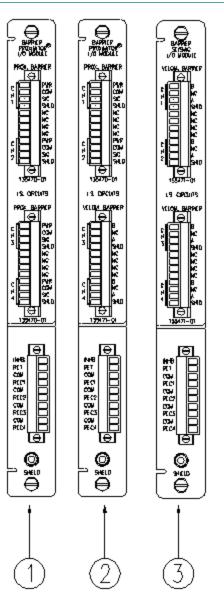

- 1. Barrier I/O Module for connecting four proximitor sensors
- 2. Barrier I/O Module for connecting four proximitor sensors and two velomitor sensor
- 3. Barrier I/O Module for connecting four velomitor sensors

#### Figure 4: Barrier I/O Modules of the 3500/42M Proximitor Seismic Monitor




## **REBAM Channels**


The following graphs show the maximum machine speed allowed for a monitor channel pair configured for REBAM. The maximum speed depends on the number of rolling elements in the bearing.

The graphs are generated with the following assumptions:

- The rotor lowpass filter corner is set at 3.2 times the shaft speed.
- The spike highpass filter corner is set at four times the element pass frequency for the outer race (BPFO).

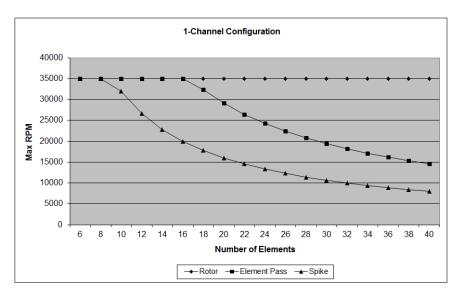



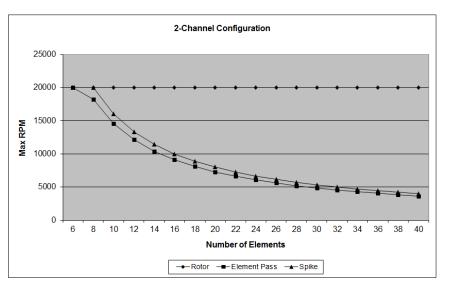





**Bently Nevada** 

a Baker Hughes business

Copyright 2020 Baker Hughes Company. All rights reserved.



Bently Nevada, Orbit Logo and Proximitor are registered trademarks of Bently Nevada, a Baker Hughes Business, in the United States and other countries. The Baker Hughes logo is a trademark of Baker Hughes Company. All other product and company names are trademarks of their respective holders. Use of the trademarks does not imply any affiliation with or endorsement by the respective holders.

Baker Hughes provides this information on an "as is" basis for general information purposes. Baker Hughes does not make any representation as to the accuracy or completeness of the information and makes no warranties of any kind, specific, implied or oral, to the fullest extent permissible by law, including those of merchantability and fitness for a particular purpose or use. Baker Hughes hereby disclaims any and all liability for any direct, indirect, consequential or special damages, claims for lost profits, or third party claims arising from the use of the information, whether a claim is asserted in contract, tort, or otherwise. Baker Hughes reserves the right to make changes in specifications and features shown herein, or discontinue the product described at any time without notice or obligation. Contact your Baker Hughes representative for the most current information.

The information contained in this document is the property of Baker Hughes and its affiliates; and is subject to change without prior notice. It is being supplied as a service to our customers and may not be altered or its content repackaged without the express written consent of Baker Hughes. This product or associated products may be covered by one or more patents. See Bently.com/legal.

1631 Bently Parkway South, Minden, Nevada USA 89423 Phone: 1.775.782.3611 or 1.800.227.5514 (US only) Bently.com