




16 Input AC Block I/O Module

Cat. No. 1791-16A0 Series B

Installation

Mount the block I/O module in a vertical (recommended) or horizontal position. Allow sufficient room around the block for cooling air flow through the block module. Refer to Figure 1.

Figure 1
Mounting Dimensions for the Block I/O Module
Cat. No. 1791-16A0 Series B (PLC version shown)

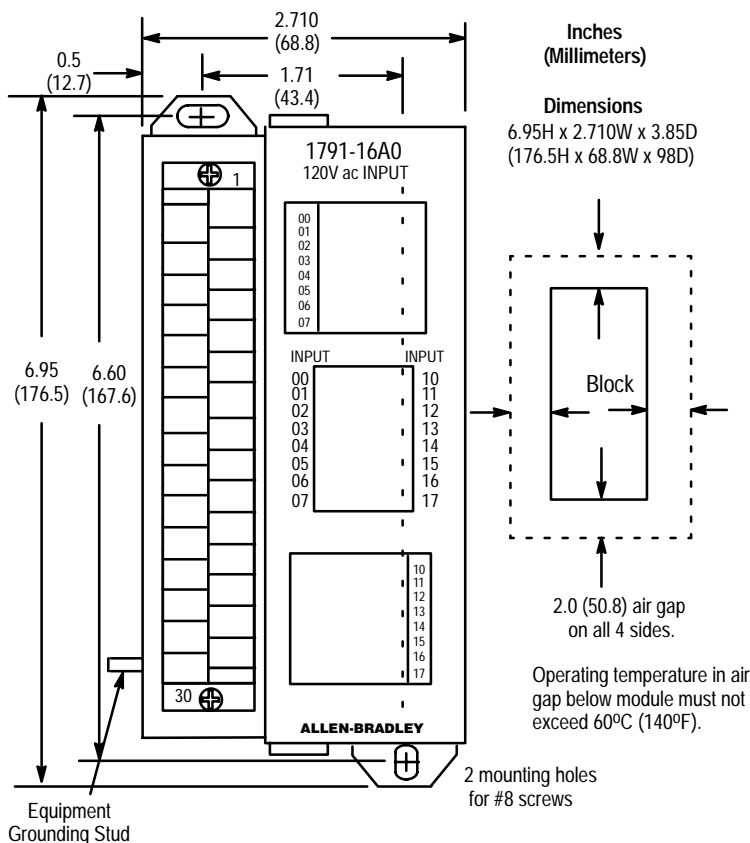

12381-I

Figure 2
Mounting on a DIN Rail


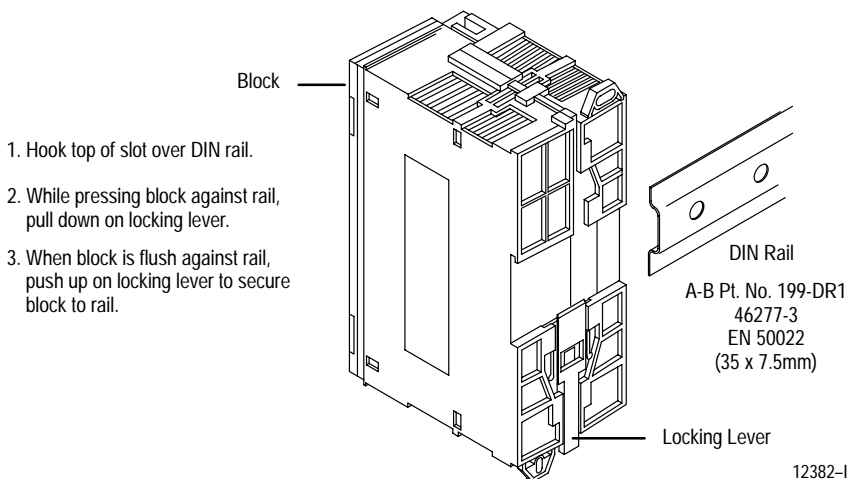


Figure 3
Inserting Labels

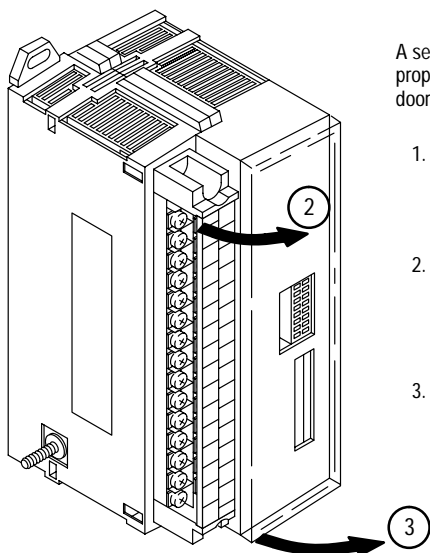


A set of labels is supplied with your module. Select the proper module designation labels (PLC or SLC) for the front door and terminal strip.

1. Remove die-cut labels from package. Select correct labels for your application. (PLC label is numbered 00-07 and 10-17. SLC label is numbered 00-07 and 08-15.)
2. Remove plastic cover on terminal strip by flexing in middle. Slip the terminal designation label into built-in holders in terminal strip cover. Flex cover slightly to install.
3. Open clear front door. Insert module designation label into slots that secure it to the door.

12384-I

Connect wiring as shown in Figure 4 or Figure 5.


Figure 4
Wiring Connections with PLC Family Programmable Controllers (refer to Table A)

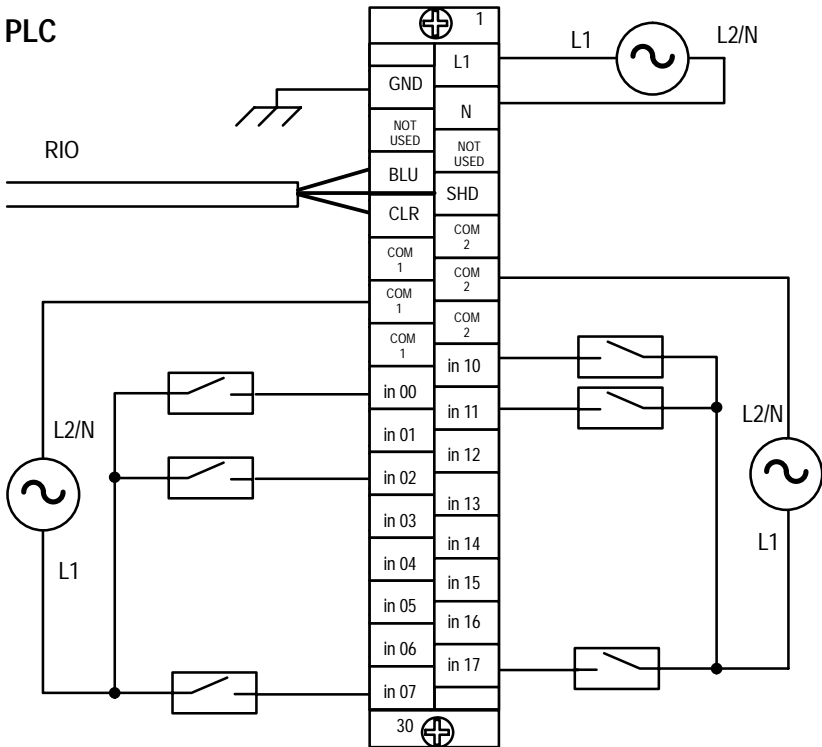

NOTE: COM 1 connections are internally connected together.
 COM 2 connections are internally connected together.

12386-I

Figure 5
Wiring Connections with SLC Family Processors (refer to Table A)

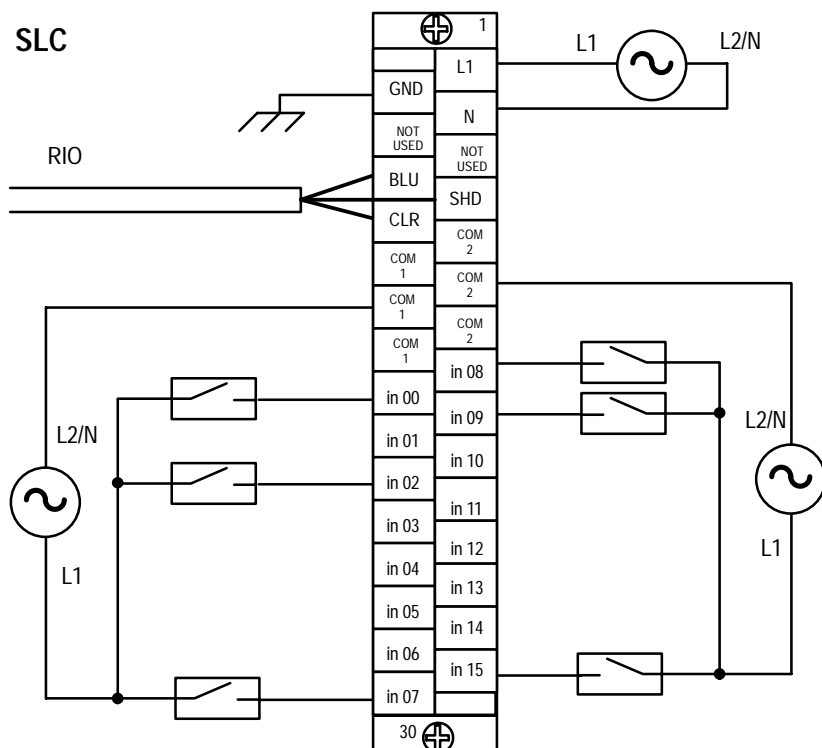

NOTE: COM 1 connections are internally connected together.
 COM 2 connections are internally connected together.

12389-I

The block I/O module has an equipment grounding stud on the lower left side of the module. Connect this grounding stud to your equipment ground. Torque the nut to 15 in-lbs maximum when connecting to your equipment ground.



ATTENTION: Do not overtighten the nut on the grounding stud when connecting the wire. Damage to the module could result.

Refer to “Programmable Controller Wiring and Grounding Guidelines” (1770-4.1) for further information.

Table A
Wiring Block Designations

| Connections | 1791-16A0 Series B | | |
|------------------------|------------------------------------------------|------------------------------------------------------------|--------------------------------|
| | Designation | Description | Terminal No. |
| Power Connections | L1 | ac hot | 1 |
| | N | ac neutral | 3 |
| | GND | Chassis ground | 2 ¹ |
| Remote I/O Connections | BLU | Blue wire – RIO | 6 |
| | CLR | Clear wire – RIO | 8 |
| | SHD | Shield – RIO | 7 |
| I/O Connections | | | |
| Input | in 00 thru in 07 | Input 00 thru 07 | 16, 18, 20, 22, 24, 26, 28, 30 |
| | COM 1 | L2/N Input Common | 10, 12, 14 ² |
| Input | COM 2 | L2/N Input Common | 9, 11, 13 ³ |
| | PLC: in 10 thru in 17 SLC: in 08 thru in 15 | PLC: Input 10 thru Input 17 SLC: Input 08 thru Input 15 | 15, 17, 19, 21, 23, 25, 27, 29 |
| | Not used | For internal test only; not for customer use. | 4, 5 |

¹ Connect chassis ground to equipment grounding stud. These are not internally connected.


² Terminals 10, 12 and 14 are internally connected.

³ Terminals 9, 11 and 13 are internally connected.

Table B
Acceptable Wiring Cables for Block I/O Connection

| Use | Cable Type |
|-------------------------|----------------------------------------------------------------------------|
| Remote I/O link | Belden 9463 |
| Input and output wiring | Up to 14AWG (2mm ²) stranded with 3/64 inch (1.2mm) insulation |

Figure 6
Switch Settings

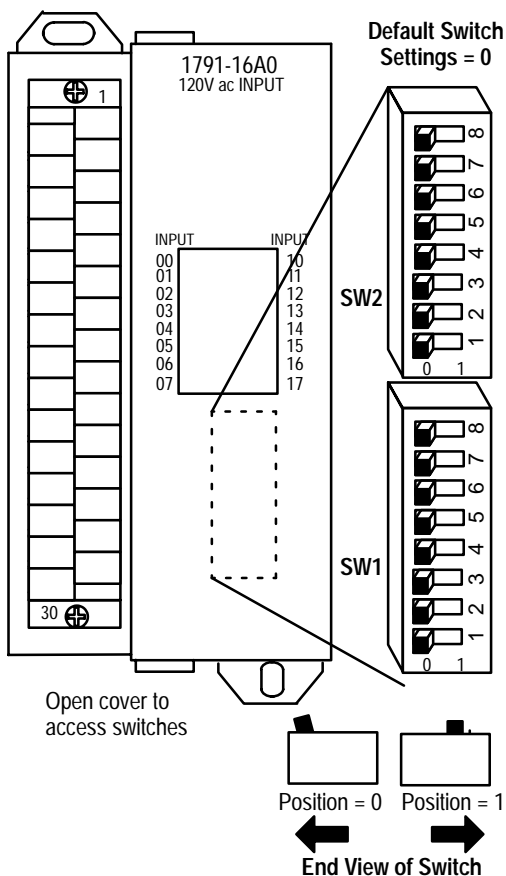

ATTENTION: Cycle power to the module after setting the switches.

Only block I/O modules with all inputs or all outputs can use complementary I/O.

NOTE: Set switch **SW2-3** to 0 if this rack will have a unique address (not complemented). If this rack address is a duplicate of another I/O block or chassis, set the switch to 1 for primary or 0 for complementary. Refer to Table C for the complementary I/O rack address.

Series A block I/O modules do not support complementary I/O. If using series A modules, set switch SW2-3 to 0.

| SW2-8 |
|----------|
| Not used |

| SW2-7 |
|----------|
| Not used |

| SW2-6 | Last I/O Group |
|-------|----------------|
| 0 | Not last rack |
| 1 | Last rack |

| SW2-5 | Processor Restart/Lockout (PRL) |
|-------|---------------------------------|
| 0 | Processor Restart |
| 1 | Processor Lockout |

| SW2-4 | Hold Last State |
|-------|-----------------|
| 0 | Reset Outputs |
| 1 | Hold Last State |

| SW2-3 | Complementary I/O ¹ |
|-------|---------------------------------|
| 0 | Non-Complemented System |
| 0 | Complementary Rack ¹ |
| 1 | Primary Rack ¹ |

¹ See note.

| Communication Rate | | |
|--------------------|-------|---------|
| SW2-2 | SW2-1 | Bits/s |
| 0 | 0 | 57.6 K |
| 0 | 1 | 115.2 K |
| 1 | 0 | 230.4 K |
| 1 | 1 | 230.4 K |

| Starting Quarter | | |
|------------------|-------|--------------|
| SW1-2 | SW1-1 | Module Group |
| 0 | 0 | 0 (1st) |
| 0 | 1 | 2 (2nd) |
| 1 | 0 | 4 (3rd) |
| 1 | 1 | 6 (4th) |

Installation Instructions
Block I/O
Cat. No. 1791-16A0 Series B

| 1747-SN Rack Number | 1771-SN Rack Number | PLC-2 Rack Number | PLC-5 Rack Number | PLC-5/250 Rack Number | PLC-3 Rack Number | SW1 Switch Position | | | | | |
|---------------------------|---------------------------|-------------------------|-------------------------|-----------------------------|-------------------------|---------------------|---|---|---|---|---|
| | | | | | | 8 | 7 | 6 | 5 | 4 | 3 |
| Rack 0 | Rack 1 | Rack 1 | Not Valid | Rack 0 | Rack 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| Rack 1 | Rack 2 | Rack 2 | Rack 1 | Rack 1 | Rack 1 | 0 | 0 | 0 | 0 | 0 | 1 |
| Rack 2 | Rack 3 | Rack 3 | Rack 2 | Rack 2 | Rack 2 | 0 | 0 | 0 | 0 | 1 | 0 |
| Rack 3 | Rack 4 | Rack 4 | Rack 3 | Rack 3 | Rack 3 | 0 | 0 | 0 | 0 | 1 | 1 |
| | Rack 5 | Rack 5 | Rack 4 | Rack 4 | Rack 4 | 0 | 0 | 0 | 1 | 0 | 0 |
| | Rack 6 | Rack 6 | Rack 5 | Rack 5 | Rack 5 | 0 | 0 | 0 | 1 | 0 | 1 |
| | Rack 7 | Rack 7 | Rack 6 | Rack 6 | Rack 6 | 0 | 0 | 0 | 1 | 1 | 0 |
| | | | Rack 7 | Rack 7 | Rack 7 | 0 | 0 | 0 | 1 | 1 | 1 |
| | | | Rack 10 | Rack 10 | Rack 10 | 0 | 0 | 1 | 0 | 0 | 0 |
| | | | Rack 11 | Rack 11 | Rack 11 | 0 | 0 | 1 | 0 | 0 | 1 |
| | | | Rack 12 | Rack 12 | Rack 12 | 0 | 0 | 1 | 0 | 1 | 0 |
| | | | Rack 13 | Rack 13 | Rack 13 | 0 | 0 | 1 | 0 | 1 | 1 |
| | | | Rack 14 | Rack 14 | Rack 14 | 0 | 0 | 1 | 1 | 0 | 0 |
| | | | Rack 15 | Rack 15 | Rack 15 | 0 | 0 | 1 | 1 | 0 | 1 |
| | | | Rack 16 | Rack 16 | Rack 16 | 0 | 0 | 1 | 1 | 1 | 0 |
| | | | Rack 17 | Rack 17 | Rack 17 | 0 | 0 | 1 | 1 | 1 | 1 |
| | | | Rack 20 | Rack 20 | Rack 20 | 0 | 1 | 0 | 0 | 0 | 0 |
| | | | Rack 21 | Rack 21 | Rack 21 | 0 | 1 | 0 | 0 | 0 | 1 |
| | | | Rack 22 | Rack 22 | Rack 22 | 0 | 1 | 0 | 0 | 1 | 0 |
| | | | Rack 23 | Rack 23 | Rack 23 | 0 | 1 | 0 | 0 | 1 | 1 |
| | | | Rack 24 | Rack 24 | Rack 24 | 0 | 1 | 0 | 1 | 0 | 0 |
| | | | Rack 25 | Rack 25 | Rack 25 | 0 | 1 | 0 | 1 | 0 | 1 |
| | | | Rack 26 | Rack 26 | Rack 26 | 0 | 1 | 0 | 1 | 1 | 0 |
| | | | Rack 27 | Rack 27 | Rack 27 | 0 | 1 | 0 | 1 | 1 | 1 |
| | | | Rack 30 | Rack 30 | Rack 30 | 0 | 1 | 1 | 0 | 0 | 0 |
| | | | Rack 31 | Rack 31 | Rack 31 | 0 | 1 | 1 | 0 | 0 | 1 |
| | | | Rack 32 | Rack 32 | Rack 32 | 0 | 1 | 1 | 0 | 1 | 0 |
| | | | Rack 33 | Rack 33 | Rack 33 | 0 | 1 | 1 | 0 | 1 | 1 |
| | | | Rack 34 | Rack 34 | Rack 34 | 0 | 1 | 1 | 1 | 0 | 0 |
| | | | Rack 35 | Rack 35 | Rack 35 | 0 | 1 | 1 | 1 | 0 | 1 |
| | | | Rack 36 | Rack 36 | Rack 36 | 0 | 1 | 1 | 1 | 1 | 0 |
| | | | Rack 37 | Rack 37 | Rack 37 | 0 | 1 | 1 | 1 | 1 | 1 |
| | | | | Rack 40 | Rack 40 | 1 | 0 | 0 | 0 | 0 | 0 |
| | | | | Rack 41 | Rack 41 | 1 | 0 | 0 | 0 | 0 | 1 |
| | | | | Rack 42 | Rack 42 | 1 | 0 | 0 | 0 | 1 | 0 |
| | | | | Rack 43 | Rack 43 | 1 | 0 | 0 | 0 | 1 | 1 |
| | | | | Rack 44 | Rack 44 | 1 | 0 | 0 | 1 | 0 | 0 |
| | | | | Rack 45 | Rack 45 | 1 | 0 | 0 | 1 | 0 | 1 |
| | | | | Rack 46 | Rack 46 | 1 | 0 | 0 | 1 | 1 | 0 |
| | | | | Rack 47 | Rack 47 | 1 | 0 | 0 | 1 | 1 | 1 |
| | | | | Rack 50 | Rack 50 | 1 | 0 | 1 | 0 | 0 | 0 |

Installation Instructions **Block I/O** **Cat. No. 1791-16A0 Series B**

| 1747-SN Rack Number | 1771-SN Rack Number | PLC-2 Rack Number | PLC-5 Rack Number | PLC-5/250 Rack Number | PLC-3 Rack Number | SW1 Switch Position | | | | | |
|---------------------------|---------------------------|-------------------------|-------------------------|-----------------------------|-------------------------|---------------------|---|---|---|---|---|
| | | | | | | 8 | 7 | 6 | 5 | 4 | 3 |
| | | | | | Rack 51 | 1 | 0 | 1 | 0 | 0 | 1 |
| | | | | | Rack 52 | 1 | 0 | 1 | 0 | 1 | 0 |
| | | | | | Rack 53 | 1 | 0 | 1 | 0 | 1 | 1 |
| | | | | | Rack 54 | 1 | 0 | 1 | 1 | 0 | 0 |
| | | | | | Rack 55 | 1 | 0 | 1 | 1 | 0 | 1 |
| | | | | | Rack 56 | 1 | 0 | 1 | 1 | 1 | 0 |
| | | | | | Rack 57 | 1 | 0 | 1 | 1 | 1 | 1 |
| | | | | | Rack 60 | 1 | 1 | 0 | 0 | 0 | 0 |
| | | | | | Rack 61 | 1 | 1 | 0 | 0 | 0 | 1 |
| | | | | | Rack 62 | 1 | 1 | 0 | 0 | 1 | 0 |
| | | | | | Rack 63 | 1 | 1 | 0 | 0 | 1 | 1 |
| | | | | | Rack 64 | 1 | 1 | 0 | 1 | 0 | 0 |
| | | | | | Rack 65 | 1 | 1 | 0 | 1 | 0 | 1 |
| | | | | | Rack 66 | 1 | 1 | 0 | 1 | 1 | 0 |
| | | | | | Rack 67 | 1 | 1 | 0 | 1 | 1 | 1 |
| | | | | | Rack 70 | 1 | 1 | 1 | 0 | 0 | 0 |
| | | | | | Rack 71 | 1 | 1 | 1 | 0 | 0 | 1 |
| | | | | | Rack 72 | 1 | 1 | 1 | 0 | 1 | 0 |
| | | | | | Rack 73 | 1 | 1 | 1 | 0 | 1 | 1 |
| | | | | | Rack 74 | 1 | 1 | 1 | 1 | 0 | 0 |
| | | | | | Rack 75 | 1 | 1 | 1 | 1 | 0 | 1 |
| | | | | | Rack 76 | 1 | 1 | 1 | 1 | 1 | 0 |
| | | | | | Not Valid | 1 | 1 | 1 | 1 | 1 | 1 |

Rack address 77 is an illegal configuration.

PLC-5/11 processors can scan rack 03.

PLC-5/15 and PLC-5/20 processors can scan racks 01–03.

PLC-5/25 and PLC-5/30 processors can scan racks 01–07.

PLC-5/40 and PLC-5/40L processors can scan racks 01–17.

PLC-5/60 and PLC-5/60L processors can scan racks 01–27.

PLC-5/250 processors can scan racks 00–37.

Table C
PLC-2 and PLC-5 With Complementary I/O

| PLC-2 Rack Number | PLC-5 Rack Number | SW1 Switch Position | | | | | |
|-------------------------|-------------------------|---------------------|---|---|---|---|---|
| | | 8 | 7 | 6 | 5 | 4 | 3 |
| Rack 1 | Not Valid | 0 | 0 | 1 | 0 | 0 | 0 |
| Rack 2 | Rack 1 | 0 | 0 | 1 | 0 | 0 | 1 |
| Rack 3 | Rack 2 | 0 | 0 | 1 | 0 | 1 | 0 |
| Rack 4 | Rack 3 | 0 | 0 | 1 | 0 | 1 | 1 |
| Rack 5 | Rack 4 | 0 | 0 | 1 | 1 | 0 | 0 |
| Rack 6 | Rack 5 | 0 | 0 | 1 | 1 | 0 | 1 |
| Rack 7 | Rack 6 | 0 | 0 | 1 | 1 | 1 | 0 |
| | Rack 7 | 0 | 0 | 1 | 1 | 1 | 1 |

When configured as complementary I/O,:

PLC-2 can scan racks 01–07

PLC-5/11 can scan rack 03

PLC-5/20, PLC-5/30, PLC-5/40, PLC-5/60
can scan racks 01–07

NOTE: Remote rack numbers which can
have a complementary rack are rack
numbers 01 thru 07 only.

The SLC 500 controllers communicate with the block I/O using an I/O Scanner module (cat. no. 1747-SN series A). Refer to the user manual for the 1747-SN/A Scanner module for more information.

Note: This block I/O module is **not** compatible with the **1747-DSN** Distributed I/O Scanner module.


Termination Resistor

A termination resistor must be installed on the last block in a series. Connect the resistor as shown in Figure 7.

Figure 7
Installing the Termination Resistor

Connect termination resistor across terminals 6 (BLU) and 8 (CLR).

150 ohm – 57.6K and 115.2K baud
82 ohm – 230.4K baud

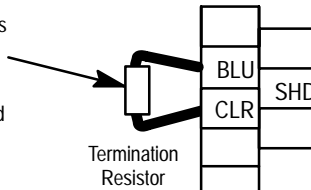


12392-I



ATTENTION: Devices that are operating at 230.4K baud must have 82 ohm terminators in place for proper operation.

Indicators

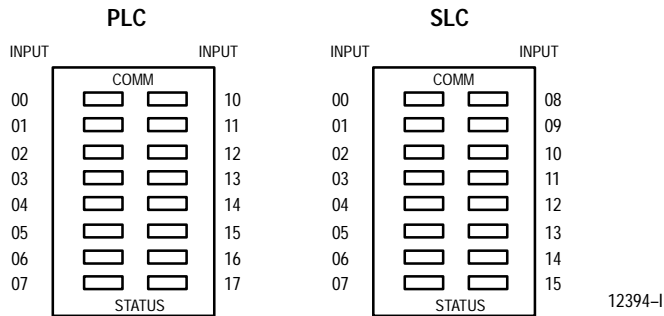

| Indicator | | Description |
|-----------|----------|------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| COMM | OFF | Communications not established |
| | ON | Communication established |
| | Flashing | Processor in Program mode |
| STATUS | OFF | Normal |
| | ON | Error (hardware or software), block power low |
| | Flashing | COMM FAIL – Communication cable off, 100ms between valid frames, no more than 255 valid frames between valid frames addressed to block, 20ms idle time exceeded. |

COMM and STATUS will alternately flash when processor restart lockout is selected, a fault has occurred and the processor is communicating with the block.

Fusing

The block I/O module is internally fused to protect the module. No external power fusing is required.

1791-16A0 Series B Specifications

| Input Specifications | | |
|----------------------------------------------------------------------|---------------------|---------------------------------------------------------------------------------------|
| Inputs per Block | | 16 (2 groups of 8) |
| Nominal Input Current | | 11.0mA |
| Nominal Input Voltage | | 120V ac |
| On-state Voltage Range | | 79–132V ac, 47–63Hz |
| Off-state Voltage | Maximum | 35V |
| On-state Current | Minimum | 5mA @ 79V, 60Hz |
| Off-state Current | Minimum | 2.3mA (60Hz) |
| Input Impedance | Maximum | 15K ohms @ 60Hz |
| Input Signal Delay | Off to on | 1.0ms |
| | On to off | 26ms (maximum) (allows for 1/2 cycle dropout) |
| General Specifications | | |
| External Power (Internally protected - no external fuse required) | | |
| Voltage | | 85–132V ac, 47–63Hz |
| Current | | 150mA |
| Dimensions | Inches | 6.95H X 2.7W X 3.85D |
| | Millimeters | 176.5H X 68.8W X 98D |
| Isolation | Power supply to RIO | 500V ac |
| | I/O Group-to-Group | 1250V ac |
| | I/O Group-to-Logic | 1250V ac |
| Power Dissipation | Maximum | 8.9 Watts |
| Thermal Dissipation | Maximum | 30.35 BTU/hr |
| Environmental Conditions | | |
| Operational Temperature | | 0 to 60°C (32 to 140°F) |
| Storage Temperature | | –40 to 85°C (–40 to 185°F) |
| Relative Humidity | | 5 to 95% noncondensing |
| Conductors | Wire Size | 14 gauge (2mm ²) stranded maximum 3/64 inch (1.2mm) insulation maximum |
| | Category | 1 ¹ |

¹ You use this conductor category information for planning conductor routing as described in the system level installation manual.

Installation Instructions
Block I/O
Cat. No. 1791-16A0 Series B

www.rockwellautomation.com

Power, Control and Information Solutions Headquarters

Americas: Rockwell Automation, 1201 South Second Street, Milwaukee, WI 53204-2496 USA, Tel: (1) 414.382.2000, Fax: (1) 414.382.4444

Europe/Middle East/Africa: Rockwell Automation, Vorstlaan/Boulevard du Souverain 36, 1170 Brussels, Belgium, Tel: (32) 2 663 0600, Fax: (32) 2 663 0640

Asia Pacific: Rockwell Automation, Level 14, Core F, Cyberport 3, 100 Cyberport Road, Hong Kong, Tel: (852) 2887 4788, Fax: (852) 2508 1846

Publication 1791-5.24 – May 1995

Supersedes publication 1791-2.24 – March 1994

PN 955122–59

Copyright 1995 Allen-Bradley Company, Inc. Printed in USA